




*SUGGESTED SIZE

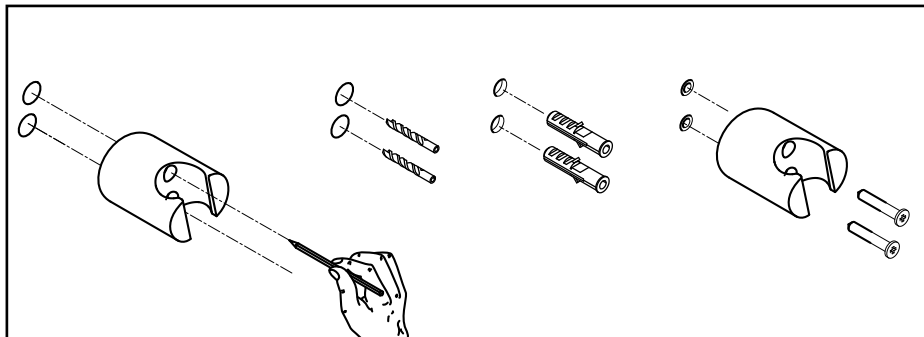


1

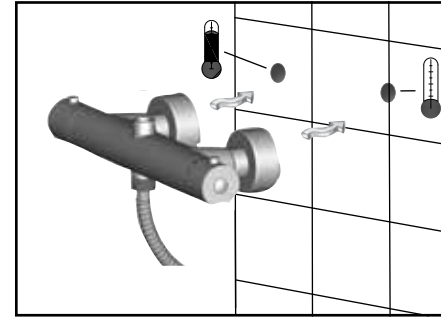



2

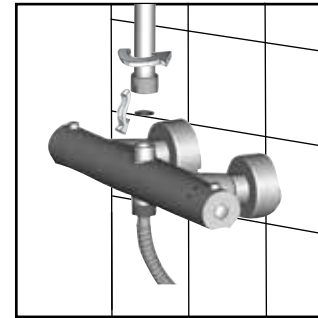


3

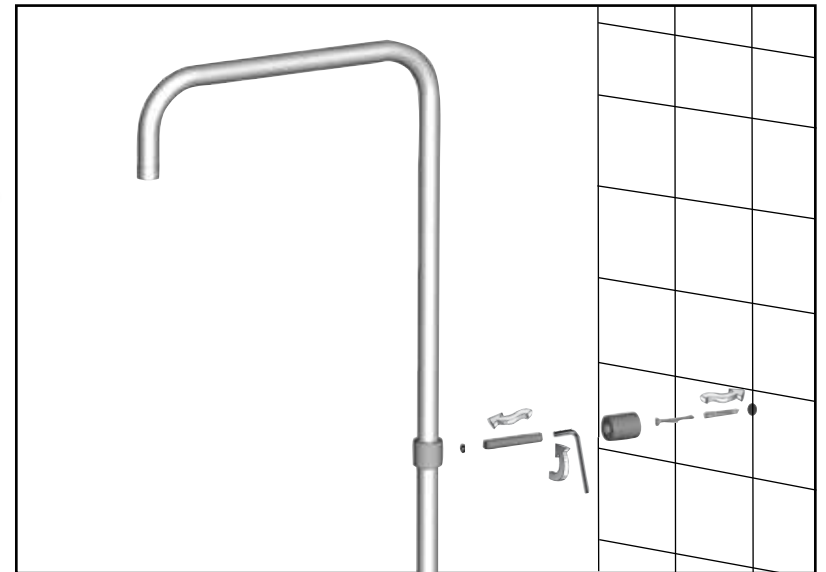

4

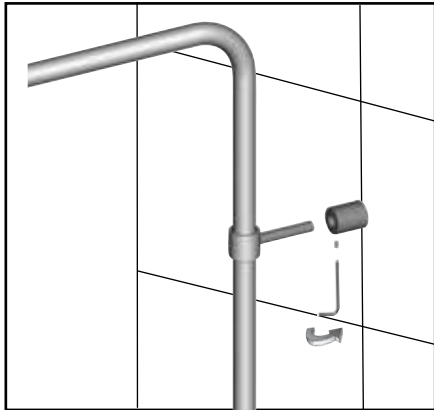

5

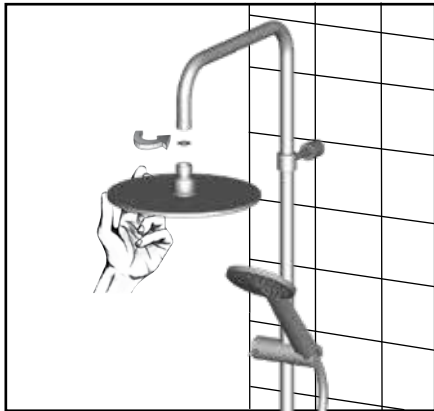

TPRIM
0219

Parina Brassware
Parina Rubineti

Installation Manual

Parina Shower Column Matt Black

TPR-508-MN



TISSINO

Designed to Inspire
Made to Experience